 
 


OUTSIDE FRONT COVER

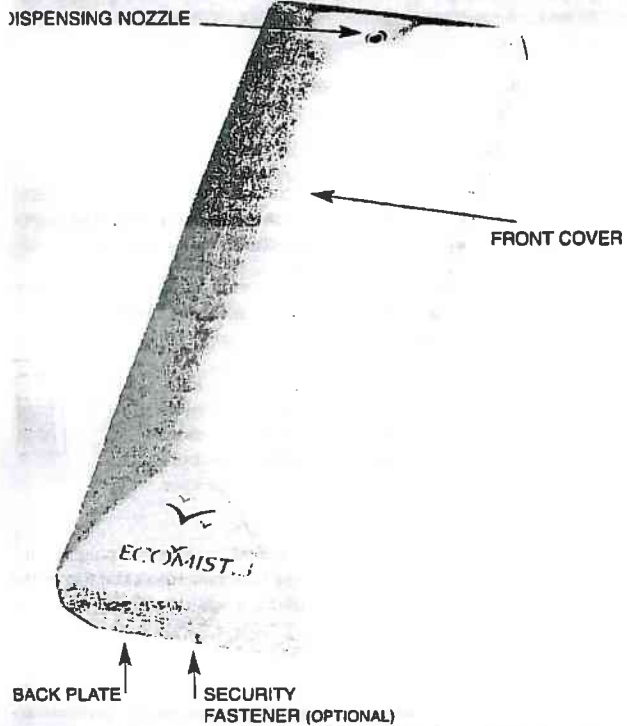


INSIDE FRONT COVER

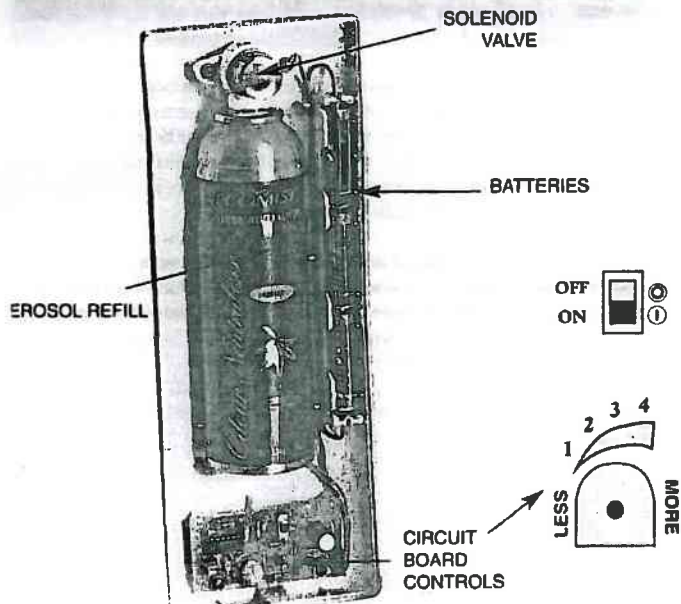


ECOMIST WARRANTY

Your Ecomist Distributor

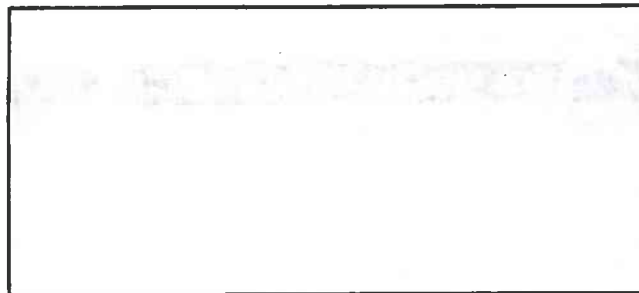

ECOMIST[®]
 Enhancing your Environment
TO ORDER CANS CONTACT
 0800 75 75 78
www.ecomistsystems.com
 Phone +64 9 578 0140
 Fax +64 9 578 0141
 Email info@ecomistsystems.com

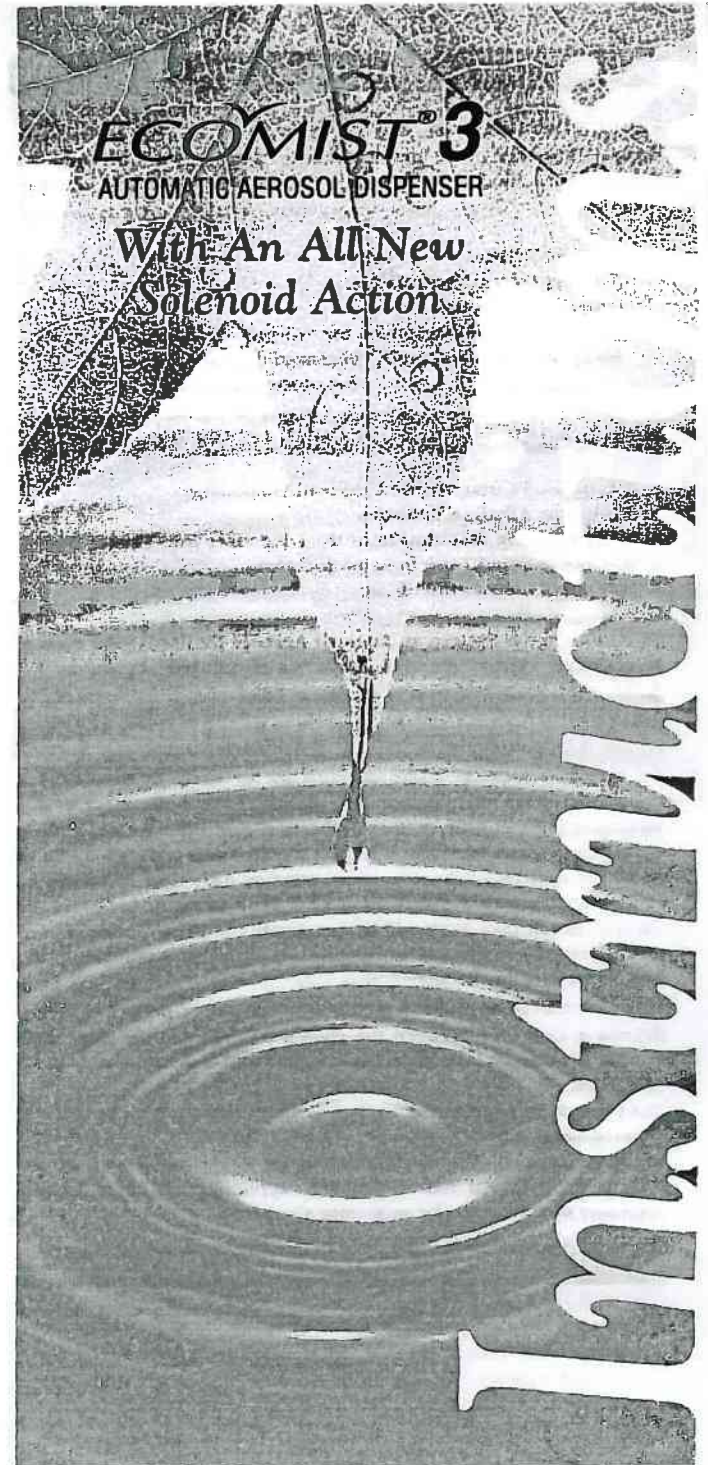

WELCOME TO ECOMIST

Congratulations on your purchase of an Ecomist 3 electronic Aerosol Dispenser. Your new Appliance is designed to increase your environmental comfort with a range of specially formulated products, including

- Ecomist Natural Insect Killer
- Ecomist Odour Neutralisers
- Ecomist Air Fresheners
- Ecomist Special fragrances for "Aroma Marketing"
- Ecomist "Mood-Makers™" - Essential Oil synergies for mood creation.

YOUR ECOMIST 3 DISPENSER KIT CONTAINS -

- 1 Ecomist 3 Computerised Aerosol Dispenser
- 3 AA Type Alkaline Batteries
- Screws for the installation of the Dispenser into Plaster Board or Double Sided Tape in some locations
- Ecomist 3 Instruction Sheet

To complete the System an Ecomist Aerosol Refill of your choice is required (These Aerosol Refills are purchased separately)

TO INSTALL A NEW DISPENSER UNIT

A) Choose a location where air currents are likely to circulate. For example above an internal door near the kitchen or dining room, or in a breezeway in the hallway. It is important that the aerosol spray is circulated to the areas where it is most required. It is not a good idea to install the dispenser next to an open window where the spray will be carried directly outside the room or next to an extractor fan. Again the effect of the aerosol spray will be lost. Install the Dispenser in an "up breeze" location so that the air flow will take the spray particles to the area where they are needed.

B) Select a position about 2 metres above the floor preferably where there is a clear area between the chosen position and the floor. Your Ecomist Dispenser has been designed for flat wall or corner fitting.

CAUTION:

Don't install over appliances, eg. Refrigerators, items made of plastic or polished surfaces.

You may need additional installations for larger residences, or for commercial, industrial and horticultural applications. A single Ecomist Dispenser should suffice for an average size house.

FASTEN BACK PLATE TO THE WALL

A) Separate the front cover from the backplate. Unsnap at base, hinge upward and separate.

B) Using the Backplate as a template, mark the positions for the two screws provided (for corner installation, remove "knockouts" and screw through side holes)


C) Install top screw loosely and align unit vertically

D) Install second screw, screw both to almost tight, align unit exactly upright and tighten both screws. (Not too tight if wall is plaster board)

YOUR ECOMIST DISPENSER IS PROGRAMMED FOR 24 - HOUR AUTOMATIC OPERATION

CHANGING THE DISPENSED QUANTITY

Your Ecomist Dispenser is factory-preset on the variable quantity dispense control knob (see diagram), for 24 hour operation in the average house. We recommend that your Ecomist 3 Dispenser operates 24 hours a day at the preset factory setting. This will create a deterrent effect, thereby helping to keep insects out, with fewer dying indoors. You can always increase the quantity dispensed by turning the knob clockwise until control becomes more effective or after a particularly bad influx of insects has been eliminated.

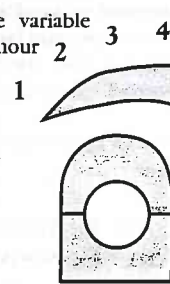

RESETTING YOUR ECOMIST 3 FOR LOCAL CONDITIONS

Air changes, general layout, temperature and humidity affect efficiency. Resetting for local conditions may be necessary for fully effective day and night operation.

You can initially increase the quantity dispensed, then decrease it again as control becomes more effective by operating the control knob for more or less control as shown (see diagram above).

INSTALLING THE BATTERIES

This dispenser requires 3 Alkaline type AA batteries. These batteries should last in excess of 10 months of Dispenser usage before new ones are needed. Carbon Zinc type batteries will generally not last nearly as long. We recommend you purchase new batteries from your Ecomist Agent. When inserting new batteries observe + and - polarity marked at each end of the batteries. Should the Dispenser not work after you have installed new batteries check the polarity is correct and if that isn't the problem, roll the batteries in the battery cradle to ensure good electrical contact is made.

INSTALLING A NEW AEROSOL CAN

With the dispenser attached to the wall, unsnap at the base, hinge upward and separate. Keeping the unit upright -

A) Unscrew the old empty refill anti-clockwise from the valve head.

B) Screw the new refill clockwise into the valve head, only finger tight, but ensuring a complete seal. Keeping the dispenser upright during a refill change is often found to be the easiest method.

C) Wipe away any excess fluid from the interior or exterior of the front cover and/or backplate, avoiding any contact with the circuit board.

D) Switch On

In a new Installation or when replacing an empty aerosol refill in an existing installation, move the switch to the ("ON") position 10 times to establish an airborne drift. (Keep eyes averted. If accidentally sprayed in eyes - flush with water).



E) Attach the Front Cover to the Backplate.

Take the front cover, with the aerosol refill and batteries in place, to the backplate that has already been fastened to the wall. Hook the top of the front cover onto the top of the back plate, hinge down and snap into place.

Disposal of empty can: Observe precautions printed on the aerosol can. All Ecomist Aerosol Cans may be re-cycled, for the metal that they are made from, to assist the environment.

SEASONAL OPERATION

At the end of the summer season, flying insects may not be as prolific. However, insects such as ants, fleas, silver fish and cockroaches can be year-round pests. You may wish to continue using your Ecomist 3 with the Natural Pyrethrum Insect Killer throughout the year. Alternatively houses closed up in the winter can be freshened up with other Ecomist products in a wide range of aerosol refills such as -

Ecomist Aroma-Fresh range of over 80 different fragrances
Ecomist Organic Odour Neutralisers in over 80 different fragrances
Ecomist Aroma-Chology Aerosols called the Mood-Makers™ Collection (a superb range of 12 Aerosol Cans each named by the mood that they are intended to enhance or create.)

Continuous use of your Ecomist 3 Dispenser will keep it in good operating condition.