

Ecomist 3K Instructions for use

Your Ecomist 3K kit contains

- 1 Ecomist Computerised Aerosol Dispenser
 - 3 AA type Alkaline batteries
 - Screws for installation of dispenser onto plaster board.
 - Plastic stand and mounting screws
 - Instructions
- Aerosol can of choice sold separately.

Installation

Where to install

Do:

- Install in a location where air currents will circulate the aerosol spray to areas where it is most required.
- Mount dispenser about 2 meters above the floor preferably where there is a clear area between the dispenser and the floor.

Don't:

- Install near or next to an open window or extractor fan or aerosol spray will be lost.

Caution: Do not install over appliances or furniture, e.g. Refrigerators, items made of plastic or polished surfaces.

Mounting Dispenser

- Separate the front cover from the backplate. Unsnap at the base, move upward and separate.
- Fix backplate to wall with screws provided.
- If using the free standing option fix inside the recess in the backplate with the screws supplied.

Batteries

Alkaline batteries must be used to ensure correct & long life operation of dispenser.

- Make sure power switch is in OFF position.
- Install the 3 Alkaline type AA batteries. Ensure that the battery polarities are correct as shown in dispenser.




Battery Low Indicator

A red light on the circuit board inside the dispenser will flash once every 5 seconds when the batteries need changing. Check when ever the dispenser is open such as when changing aerosol cans or when adjusting program settings.

Aerosol Can

- Turn the dispenser OFF.
- Remove old aerosol can by unscrewing anticlockwise.
- Remove spray nozzle from the top of the new aerosol can.

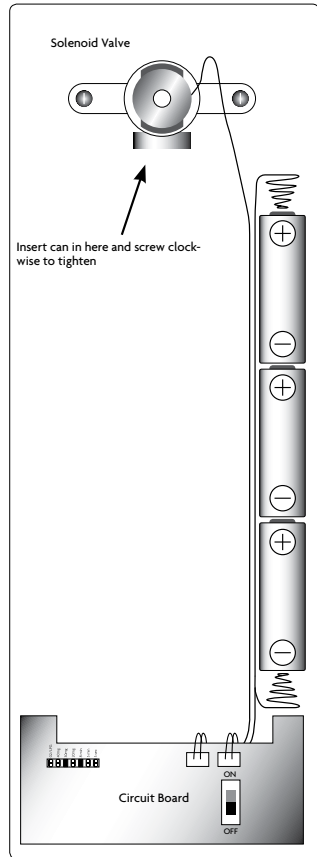


- Screw the can into the solenoid valve clockwise until finger tight ensuring a complete seal. **Do not over-tighten.**
- Face the dispenser away from you and turn the power switch ON, the dispenser will spray once.

Caution: If accidentally sprayed in eyes flush immediately with water.

Dispenser Program Settings

- Dispenser is set to factory settings of 8min and 30mg.

At no stage during normal operation should a jumper be fitted to the position labelled "02/LPG".

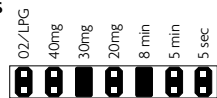

To adjust, move the black jumpers on the circuit board.

For future reference, keep this booklet inside your dispenser

E3K Dispenser Instruction Booklet

Enhancing your Environment
ECOMIST®

General

Insect control

- It is recommended that dispensers for insect control are run for 24hrs per day to be most effective. This will create a repellent effect, helping to keep insects out, with fewer dying indoors.
- Changes in air current, size/layout of area, temperature and humidity all affect the efficiency of the dispenser. Alterations to frequency and dispensed quantity may be required to match local conditions.

Seasonal Operation

- At the end of the summer season flying insects may not be so prolific. However, insects such as ants, fleas, silver fish and cockroaches can be year round pests. We recommend continued use of your Ecomist dispenser with natural Pyrethrins insect killer throughout the year. Alternatively buildings can be fragranced using other Ecomist products such as:

Ecomist Odour Neutraliser

Ecomist Fragrances

Ecomist Mood Makers

For more information contact your local Ecomist distributor or visit our website:

New Zealand: www.ecomistsystems.com

Australia: www.ecomist.com.au

For Enquiries call:
NZ – 0800 75 75 78
AUS – 1800 243 500

ECOMIST®
Enhancing your Environment