

## Ecomist E4C Instructions for use

Your Ecomist E4C kit contains

- 1 Ecomist Computerised Aerosol Dispenser
- 3 AA type Alkaline batteries
- Screws for installation of dispenser onto plaster board.
- Plastic stand and mounting screws
- Instructions

(Note: Aerosol can of choice sold separately)

## Installation

Where to install

- Install in a location where air currents will circulate the aerosol spray to areas where it is most required.
- Mount dispenser approximately 2 meters above the floor preferably where there is a clear area between the dispenser and the floor.
- **DO NOT** install near or next to an open window or extractor fan as aerosol spray will be lost.
- **DO NOT** install near sources of ignition. (Aerosols are flammable)
- **DO NOT** spray Insect Killer aerosols directly on humans, pets, exposed food, food preparation areas or food utensils.

 
Caution: Do not install over appliances or furniture, e.g. Refrigerators, items made of plastic or polished surfaces. Ensure adequate ventilation and airflow as excessive inhalation or exposure may cause respiratory and/or skin irritation

## Mounting Dispenser

- To open dispenser separate the front cover from the back plate by pressing on the bottom of the dispenser and pull apart gently.
- Fix back plate to wall with screws provided.
- If using the free standing option fix inside the recess in the back plate with the screws supplied.

## Batteries


**Alkaline batteries must be used to ensure correct & long life operation of dispenser.**

- Make sure power switch is in OFF position. 
- Install the 3 Alkaline type AA batteries. Ensure that the battery polarities are correct as shown in dispenser.

## How to Replace the Aerosol Can

- Turn the dispenser OFF.
- Remove old aerosol can by unscrewing anticlockwise.
- Remove spray nozzle from the top of the new aerosol can.
- Screw the can into the solenoid valve clockwise until finger tight ensuring a complete seal. **Do not over-tighten.**
- Face the dispenser away from you and turn the power switch ON, the dispenser will spray once.


Caution: If accidentally sprayed in eyes flush immediately with water.

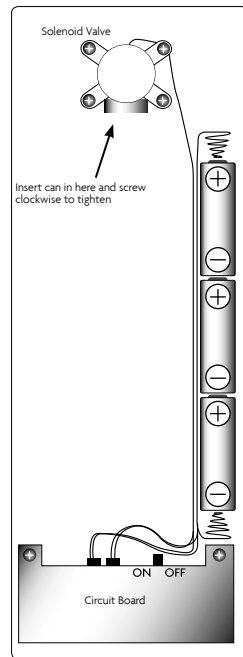


## Dispenser Program Settings

- Your Ecomist E4C dispenser comes with 3 programme options. When you switch your dispenser on it will run on the Normal programme.

### Normal:

- Use for low to medium insect control.   
To activate press the "One Dot" button. The dispenser programme setting will be confirmed by the dispenser spraying once.
- On Normal the dispenser will spray once every 7 mins during the day and once every 15 mins at night.

### High:

- Use for large rooms and when large numbers of insects are present.
- To activate press the "Two Dot" button.   
The dispenser programme setting will be confirmed by the dispenser spraying twice.
- On high setting the dispenser will spray once every 4 mins during the day and once every 15 mins at night.

## E4C Dispenser Instruction Booklet

For future reference, keep this  
booklet inside your dispenser

### FOR ENQUIRIES CALL:

New Zealand – 0800 75 75 78



Australia – 1800 243 500

South Africa - 0861 ECOMIST

Korea - 080 918 5100

Philippines - 687-2161

#### Low:

- Recommended for use with low insect activity during the winter season.
- To activate press the “One Dot and Two Dot”   buttons together.  
The dispenser programme setting will be confirmed by the dispenser spraying three times.
- On Low setting the dispenser will single spray every 7 mins during the day and will not operate at night.

**Caution:** Leaving lights on or mounting dispenser in area that is lit by external lighting will prevent your E4C dispenser from going into night mode.

### General

#### Insect control

- It is recommended that dispensers for insect control are run for 24hrs per day to be most effective. This will create a repellent effect, helping to keep insects out, with fewer dying indoors.
- Changes in air current, size/layout of area, temperature and humidity all affect the efficiency of the dispenser. Alterations to frequency and dispensed quantity may be required to match local conditions.

#### Seasonal Operation

- At the end of the summer season flying insects may not be so prolific. However, insects such as ants, fleas, silver fish and cockroaches can be year round pests. We recommend continued use of your Ecomist dispenser with natural Pyrethrins insect killer throughout the year. Alternatively buildings can be fragranced using other Ecomist products such as:
  - *Ecomist Odour Neutralisers*
  - *Ecomist Fragrances*
  - *Ecomist Mood Makers*

For more information contact your local Ecomist distributor or visit our website:

New Zealand: [www.ecomistsystems.com](http://www.ecomistsystems.com)

Australia: [www.ecomist.com.au](http://www.ecomist.com.au)

South Africa: [www.ecomist.co.za](http://www.ecomist.co.za)

Korea: [www.ecomist.co.kr](http://www.ecomist.co.kr)