

# Ecomist 4K Instructions for use

## Your Ecomist 4K kit contains

- 1 Ecomist Computerised Aerosol Dispenser
- 3 AA type Alkaline batteries
- Screws for installation of dispenser onto plaster board.
- Plastic stand and mounting screws
- Instructions

Aerosol can of choice sold separately.

## Installation

### Where to install

#### Do:

- Install in a location where air currents will circulate the aerosol spray to areas where it is most required.
- Mount dispenser about 2 meters above the floor preferably where there is a clear area between the dispenser and the floor.

#### Don't:

- Install near or next to an open window or extractor fan as aerosol spray will be lost.


**Caution: Do not install over appliances or furniture, e.g. Refrigerators, items made of plastic or polished surfaces.**

### Mounting Dispenser

- Separate the front cover from the back plate. Unsnap at the base, move upward and separate.
- Fix back plate to wall with screws provided.
- If using the free standing option fix inside the recess in the back plate with the screws supplied.

### Batteries


**Alkaline batteries must be used to ensure correct & long life operation of dispenser.**

- Make sure power switch is in OFF position.  ON OFF
- Install the 3 Alkaline type AA batteries. Ensure that the battery polarities are correct as shown in dispenser.

### Aerosol Can

- Turn the dispenser OFF.
- Remove old aerosol can by unscrewing anticlockwise.
- Remove spray nozzle from the top of the new aerosol can.
- Screw the can into the solenoid valve clockwise until finger tight ensuring a complete seal. **Do not over-tighten.**
- Face the dispenser away from you and turn the power switch ON, the dispenser will spray once.


**Caution: If accidentally sprayed in eyes flush immediately with water.**

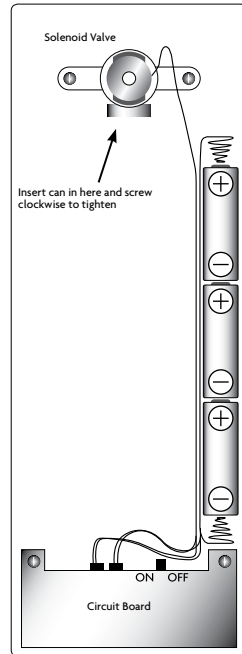


### Dispenser Program Settings

- Your Ecomist 4K dispenser comes with 3 programme options. When you switch your dispenser on it will run on the Normal programme.

#### Normal:

- Use for low to medium insect control. 
- To activate press the "One Dot" button. The dispenser programme setting will be confirmed by the dispenser spraying once.
- On Normal the dispenser will spray once every 7 mins during the day and once every 15 mins at night.

#### High:

- Use for large rooms and when large numbers of insects are present. 
- To activate press the "Two Dot" button. The dispenser programme setting will be confirmed by the dispenser spraying twice.
- On high setting the dispenser will double spray every 7 mins during the day and single spray every 15 mins at night.



For future reference, keep this booklet inside your dispenser

## E4K Dispenser Instruction Booklet

*Enhancing your Environment*  
**ECOMIST®**

For Enquiries call:  
NZ – 0800 75 75 78  
AUS – 1800 243 500

### Low:

- Recommended for use with low insect activity during the winter season.
- To activate press the “One Dot and Two Dot”   buttons together.

The dispenser programme setting will be confirmed by the dispenser spraying three times.

- On Low setting the dispenser will single spray every 7 mins during the day and will not operate at night.

**Caution: Leaving lights on or mounting dispenser in area that is lit by external lighting will prevent your E4K dispenser from going into night mode.**

### General

#### Insect control

- It is recommended that dispensers for insect control are run for 24hrs per day to be most effective. This will create a repellent effect, helping to keep insects out, with fewer dying indoors.
- Changes in air current, size/layout of area, temperature and humidity all affect the efficiency of the dispenser. Alterations to frequency and dispensed quantity may be required to match local conditions.

#### Seasonal Operation

- At the end of the summer season flying insects may not be so prolific. However, insects such as ants, fleas, silver fish and cockroaches can be year round pests. We recommend continued use of your Ecomist dispenser with natural Pyrethrins insect killer throughout the year. Alternatively buildings can be fragranced using other Ecomist products such as:

Ecomist Odour Neutraliser

Ecomist Fragrances

Ecomist Mood Makers

For more information contact your local Ecomist distributor or visit our website:

New Zealand: [www.ecomistsystems.com](http://www.ecomistsystems.com)

Australia: [www.ecomist.com.au](http://www.ecomist.com.au)

**ECOMIST®**  
*Enhancing your Environment*