

Ecomist 6 Instructions for use

Your Ecomist 6 kit contains

- 1 Ecomist Electronic Aerosol Dispenser
- 4 AA type Alkaline batteries
- Screw for installation of dispenser onto plaster board.
- Instructions

Aerosol can of choice sold separately.

Installation

Where to install

Do:

- Install in a location where air currents will circulate the aerosol spray to areas where it is most required.
- Mount dispenser about 2 meters above the floor preferably where there is a clear area between the dispenser and the floor.

Don't:

- Install near or next to an open window or extractor fan as aerosol spray will be lost.

Caution: Do not install over appliances or furniture, e.g. Refrigerators, items made of plastic or polished surfaces.

Mounting Dispenser

- Fit screw to wall, do not screw all the way in but leave a gap of approx 8mm between screw head and wall.
- To hang, slot screw head into slot on wall mounting bracket in the back of the dispenser.

Batteries

Alkaline batteries must be used to ensure correct & long life operation of dispenser.

- Make sure power switch is in OFF position.
- Install the 4 Alkaline type AA batteries. Ensure that the battery polarities are correct as shown in dispenser.




Aerosol Can

- Turn the dispenser OFF.
- Remove old aerosol can by unscrewing anticlockwise.
- Remove spray nozzle from the top of the new aerosol can.
- Screw the can into the solenoid valve clockwise until finger tight ensuring a complete seal. **Do not over-tighten.**
- Face the dispenser away from you and turn the power switch ON, the dispenser will spray once.

Caution: If accidentally sprayed in eyes flush immediately with water.

Dispenser Program Settings

- Dispenser is set to factory settings of 7 min and 60mg.

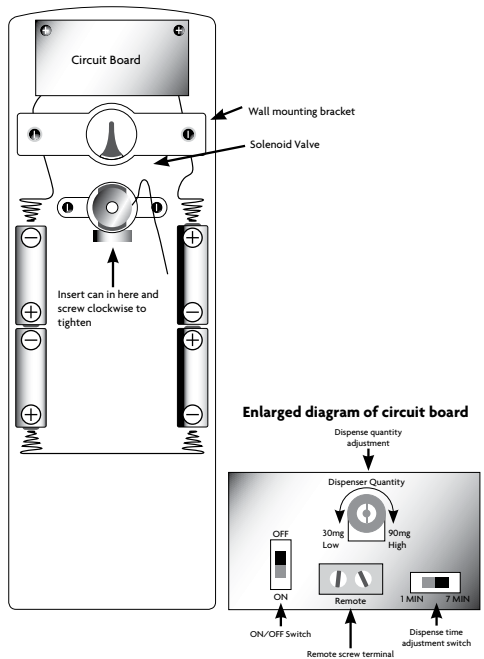

- To adjust amount dispensed, turn the knob anti-clockwise to decrease and clockwise to increase.
- Frequency can be adjusted using the switch between 1 min (recommended for outdoors) and 7 min (recommended for indoors).



Outdoor Operation

- Place unit in an up breeze location. Be aware that dispenser effectiveness may be reduced as breeze increases.
- Switch unit onto 1 min setting and turn on. It is suggested to start dispenser 10 mins before you wish to use the area to clear it of insects.

Caution: Aerosol contains flammable gas, DO NOT use close to naked flames. Keep dispenser dry. Keep dispenser away from children.

For future reference, keep this booklet inside your dispenser


E6 Dispenser Instruction Booklet

Enhancing your Environment
ECOMIST®

For Enquiries call:
NZ – 0800 75 75 78
AUS – 1800 243 500

Remote Operation

- Remote control of the dispenser is possible by wiring a remote switch to the **REMOTE** screw terminal on the circuit board.

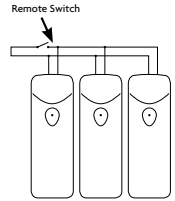

General

Insect control

- It is recommended that dispensers for insect control are run for 24hrs per day to be most effective. This will create a repellent effect, helping to keep insects out, with fewer dying indoors.
- Changes in air current, size/layout of area, temperature and humidity all affect the efficiency of the dispenser. Alterations to frequency and dispensed quantity may be required to match local conditions.

Seasonal Operation

- At the end of the summer season flying insects may not be so prolific. However, insects such as ants, fleas, silver fish and cockroaches can be year round pests. We recommend continued use of your Ecomist dispenser with natural Pyrethrins insect killer throughout the year. Alternatively buildings can be fragranced using other Ecomist products such as:

Ecomist Odour Neutraliser

Ecomist Fragrances

Ecomist Mood Makers

For more information contact your local Ecomist distributor or visit our website:

New Zealand: www.ecomistsystems.com

Australia: www.ecomist.com.au

ECOMIST®
Enhancing your Environment